

# Gigaset

 
 
# Sculpture

## CL750

This user guide only describes a small proportion of the functions of the telephone.

A detailed and up-to-date user guide is available at  
[www.gigaset.com/manuals](http://www.gigaset.com/manuals)



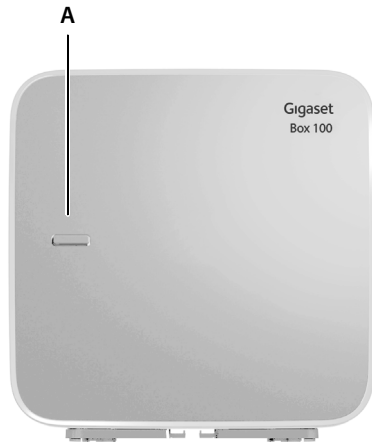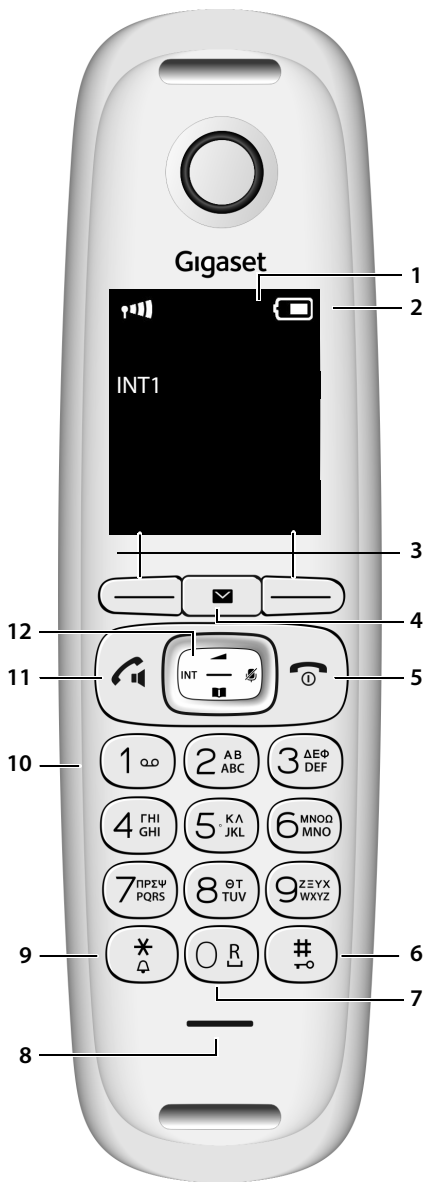

# Overview

## Handset

- 1 Display**
- 2 Status bar**  
Icons display current settings and operating status of the telephone
- 3 Display keys**
- 4 Message key**  
Access to the call and message lists;  
**Flashes:** new message or new call
- 5 End call key, On/off key**  
End call; cancel function;  
Go back one menu level ▶ Press **briefly**  
Return to idle status ▶ Press **and hold**  
  
Switch the handset on/off (in idle status) ▶ Press **and hold**
- 6 Hash key**  
Lock/unlock the keypad (in idle status) ▶ Press **and hold**  
Toggle between upper/lower case and digits ▶ Press **briefly** (when inputting text)  
Insert a dialling pause ▶ Press **and hold**
- 7 Recall key**  
Consultation call (flash) ▶ Press **and hold**
- 8 Microphone**
- 9 Star key**  
Switch between pulse dialling/ tone dialling ▶ Press **briefly** (during existing connection)  
Open special characters table ▶ Press **briefly** (when inputting text)

- 10 Key 1**  
Select network mailbox ▶ Press **and hold**
- 11 Talk key / Handsfree key**  
Accept call; dial number displayed; switch between receiver and handsfree mode; send SMS (when composing an SMS)  
Open the redial list ▶ Press **briefly**  
Start dialling ▶ Press **and hold**
- 12 Control key / menu key**





## Base

- A Registration/paging key**  
Locate a handset (paging) ▶ Press **briefly**  
Register handset ▶ Press **and hold**

## Using the user guide effectively


# Using the user guide effectively

 
## Icons

 

	Warnings, which, if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

## Keys

Talk key / Handsfree key  or  and 

End call key 

Number / letter keys  to 

Star key  / Hash key 

Message key  / Recall key 

Control key rim  / centre 







 


Display keys, e. g. **OK**, **Back**, **Select**, **Change**, **Save**

## Procedures

**Example:** Switching Auto answer on/off

Illustration in the user guide:

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** ( = on)

Step	Follow this procedure
▶ 	When in idle status press the <b>centre</b> of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ <b>OK</b>	Select <b>OK</b> to confirm. The submenu <b>Settings</b> opens.
▶  <b>Telephony</b>	Select the <b>Telephony</b> entry using the control key  .
▶ <b>OK</b>	Select <b>OK</b> to confirm. The submenu <b>Telephony</b> opens.
▶ <b>Auto Answer</b>	The function to switch Auto answer on/off appears as the first menu item.
▶ <b>Change</b>	Select <b>Change</b> to activate or deactivate. Function is activated  / deactivated  .

# Contents

<b>Overview</b> .....	<b>1</b>
Handset .....	1
Base .....	1
Using the user guide effectively .....	2
<b>Safety precautions</b> .....	<b>4</b>
<b>Getting started</b> .....	<b>5</b>
Base .....	5
Handset .....	6
<b>Using the telephone</b> .....	<b>9</b>
Getting to know your telephone .....	9
Making calls .....	13
Message lists .....	17
Call lists .....	18
Directory .....	19
<b>Additional functions</b> .....	<b>21</b>
Calendar .....	21
Alarm clock .....	22
Baby monitor .....	23
ECO DECT .....	25
Protection against unwanted calls .....	26
Other functions .....	27
<b>Appendix</b> .....	<b>28</b>
Customer Service & Assistance .....	28
Manufacturer's advice .....	29
Display icons .....	31
<b>Index</b> .....	<b>33</b>



Not all functions described in the user guide are available in all countries or from all network providers.

## Safety precautions

# Safety precautions



Read the safety precautions and the user guide before use.

The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.



Use only **rechargeable batteries** that correspond to the **specification** (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.

If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").

# Getting started

## Contents of the package

- One **base**,
- One power adapter for the base,
- One phone cable,
- One **handset**,
- One charging cradle including power adapter,
- One battery cover,
- Two batteries,
- One user guide

Models with multiple handsets, per handset:

- One handset,
- One charging cradle including power adapter,
- Two batteries and one battery cover



 
The base station and charging cradle are designed for use in closed, dry rooms within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

## Base

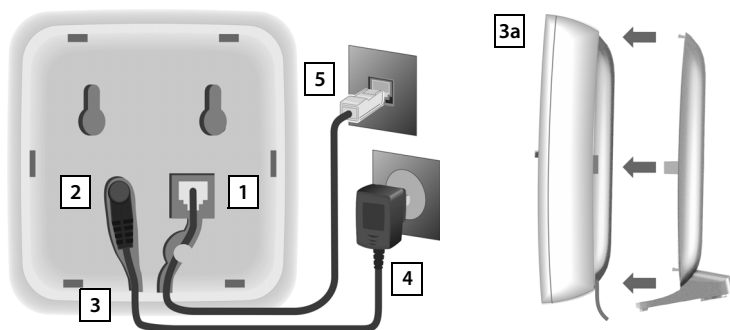

- Insert the phone cable into the right-hand connection socket **1** at the rear of the base until it clicks into place.

## Handset

- Insert the power cable from the power adapter into the connection socket on the left **2**.
- Push both cables into the appropriate cable channels **3**.
- Place the cover in the notches on the back of the base **3a** (not if mounting on the wall).
- Connect the power **4** adapter
- Connect the phone **5** jack

 
## Handset



The network cable must **always be connected** in order to function, as the phone will not operate without a power supply.

## Connecting the charging cradle

- ▶ Insert the jack of the power adapter into the power supply on the bottom of the charging cradle **1**, turn it backwards and click into place.
- ▶ Run the cable through one of the cable channels **2**.
- ▶ Plug the power adapter into the power socket **3**.

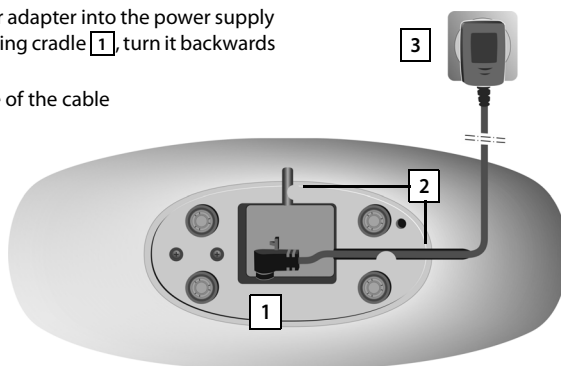

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Turn the jack forwards (unlock) and remove.

## Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

## Inserting the batteries

 


Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

 


## Handset

- ▶ Insert the batteries (for correct +/- direction, see diagram).

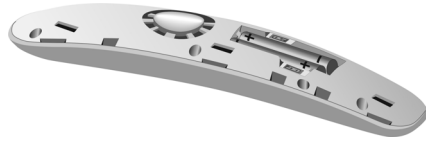

- ▶ Close the battery cover and apply pressure until it clicks into place.

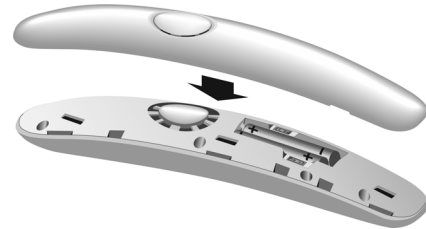


To re-open the battery cover:

 
- ▶ Reach into the recess and lift the cover.



## Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle.

The batteries are fully charged when the power icon  disappears from the display.







Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

## Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key .
- ▶ Press the keys **6** and **5** **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ Selecting a different language: ▶ Press the control key , until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .



## Handset

### Registering the handset

A handset can be registered to up to four base stations. The registration process depends on the base station.



Registration must be initiated on the base station **and** on the handset.

Both must be carried out **within 60 secs.**

#### On the base station

- ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).

#### On the handset

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ▶ ... use to select base station (if the handset is already registered to four base stations) ▶ **OK** ... an available base station is sought ▶ ... enter system-PIN (default setting: **0000**) ▶ **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.

### Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls, and to enable the alarm to be used.

- ▶ Press the display key **Time**

or, if the date and time have already been set:

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**



The active cursor position flashes ▶ ... change cursor position with ▶ ... switch between cursor positions with

Enter date:

- ▶ ... using enter the day, month and year in 8-digit format, e.g. for 15/08/2015.

Enter time:

- ▶ ... using enter hours and minutes in 4-digit format, e.g. for 07:15.

 
Save settings:

- ▶ Press the display key **Save**. ... **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key

**The telephone is now ready for use.**

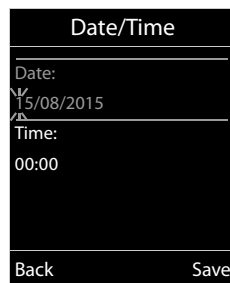



# Using the telephone

---

## Getting to know your telephone

---

 



### Switching the handset on/off

- Switch on: ▶ When the handset is switched off press and **hold** the End call key 
- Switch off: ▶ When the handset is in idle status press and **hold** the End call key 

---

### Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone. If the handset is locked with a PIN, you need this to unlock it.

- Switch on: ▶  Press and **hold** ... the icon  appears on the display
- Switch off: ▶  Press and **hold** ▶ ... use  to enter the handset PIN (if other than 0000)



If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.



It is not possible to call emergency numbers either when keypad lock is activated.

## Getting to know your telephone

### Control key

 


The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

#### In idle status

Open the directory



Open the main menu



Open the list of handsets



#### In submenus, selection and entry fields

Confirm a function



#### During a conversation

Open the directory



Mute the microphone



Initiate an internal consultation call

 


Adjust the loudspeaker volume for receiver and handsfree mode



### Display keys

The display keys perform a range of functions depending on the operating situation.

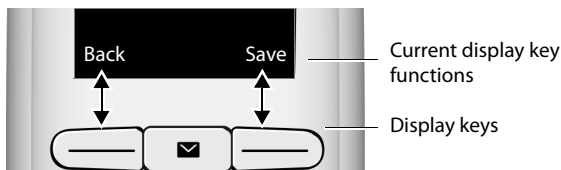







Display key icons → p. 31.



## Menu guidance

The functions of your telephone are displayed on a menu that consists of several levels

### Select/confirm functions

Confirm selection using	OK or press the middle of the control key 
One menu level back using	Back
Change to idle status by	 Press and hold
Switch function on/off using	Change on  / off 
Activate/deactivate option using	Select activated  / not activated 


### Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ OK

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

### Submenus

 
The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ OK


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ Press the End call key  briefly

 
### Returning to idle status

▶ Press and hold the End call key 

 


If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Example

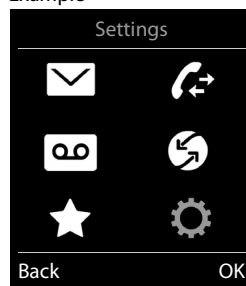

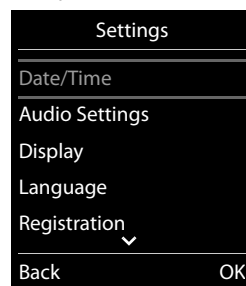

Example





## Getting to know your telephone

### Entering text



 
#### Input position

 
- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

 

#### Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

#### Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lowercase, uppercase and number entry mode: ▶ Press the hash key 


When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**




The availability of special characters depends on the character set of the handset.


## Making calls

### Making calls

▶ ... use  to enter the number ▶ **briefly** press the Talk key 

or

▶ Press and **hold** the Talk key  ▶ ... use  to enter the number

Cancel dialling: ▶ Press the End call key 





Further information about Calling Line Identification can be found in the detailed user guide at → [www.gigaset.com/manuals](http://www.gigaset.com/manuals) or on the enclosed CD (if included).

### Dialling from the directory

▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:




▶ ... use  to select a number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

### Dialling from the redial list

The redial list contains the 20 numbers last dialled with the handset.

▶ **Briefly** press the Talk key  ... the redial list is opened ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:






▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the desired number is reached press the Talk key 

### Dialling from the call list

The call lists (→ p. 18) contain the most recent accepted, outgoing and missed calls.


▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select an entry ▶ Press the Talk key 

Example

All calls	
  Frank	14/02/2015, 15:40
 089563795	13/02/2015, 15:32
  Susan Black	11/02/2015, 13:20
<b>View</b>	<b>Options</b>



The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .

## Making calls



Further information about making calls:

- Calling Line Identification,
- Managing entries in the redial list,
- One touch call,
- Dialling in extension systems

can be found in the detailed user guide for the Gigaset CL750 at

→ [www.gigaset.com/manuals](http://www.gigaset.com/manuals)

## Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key . Accept a call:

- Press the Talk key or ► **Accept**
- If **Auto Answer** is activated: ► Remove the handset from the charging cradle
- Accept a call with the Gigaset L410 handsfree clip: ► Press the Talk key .



The Gigaset L410 is registered to the base station → [Gigaset L410 user guide](#)

Switch off ringtone: ► **Silence** ... the call can be accepted for as long as it is shown on the display

## Making internal calls

- Press **briefly** ... the handset list is opened, this handset is indicated by < ► ... use to select handset or **Call all** (group call) ► Press the Talk key



Multiple handsets have been registered to the base station.

Further information can be found in the detailed user guide at → [www.gigaset.com/manuals](http://www.gigaset.com/manuals) or on the enclosed CD (if included)

Fast access for group call:

- Press **briefly** ►
- or ► press and **hold**



Internal calls to other handsets registered to the same base station are free of charge.

You hear the busy tone if:

- there is already an internal connection,
- The handset being called is not available (deactivated, outside of range).
- The internal call is not accepted within 3 minutes.



## Internal consultation call/internal transfer

Call an **external** participant and transfer the call to an **internal** participant or hold a consultation call with him or her.

- ▶  ▶ ... the list of handsets is opened ▶ ... use  to select a handset or **Call all** ▶ **OK**  
... the internal participant(s) are called ... possible options:

Hold a consultation call:

- ▶ Speak to the internal participant


Return to the external call:

- ▶ **Options** ▶  **End active call** ▶ **OK**

Transfer the external call when the internal participant has answered:

- ▶ Announce an external call ▶ Press the End call key 

Transfer the external call before the internal participant answers:



- ▶ Press the End call key  ... the external call is forwarded immediately. If the internal participant does not answer or the line is busy, the external call will automatically return to you.


End the internal call if the internal participant does **not** answer or the line is busy:

- ▶ **End** ... You return to the external call

## Establishing a conference call/call swapping

Conduct a call while a second call is being held. Both callers are indicated on the display.

- Call swapping: ▶ Use  to swap between both participants.
- Establish a three-way conference call: ▶ **Conf.**
- End a conference call: ▶ **End Conf.** ... You have been connected back to external participant ... ▶ use  to swap between both participants

The other participants end the conference call using the End call key .

## Accepting/rejecting call waiting

An external call arriving during an internal call is indicated with a call waiting tone. If the number is transferred, you will see the number or the name of the caller on the display.

- Rejecting a call: ▶ **Reject**  
The call waiting tone is turned off. The call continues to be indicated on the other registered handsets.
- Accepting a call: ▶ **Accept** ... Speak to the new caller, the previous call is placed on hold.

## Internal call waiting during an external call

If an internal participant attempts to call you while you are involved in an external or internal call, this call is shown on the display (**Call Waiting**).

- End display: ▶ Press any key
- Accept the internal call: ▶ End your current call  
The internal call is indicated in the usual way. You can accept the call.

## Making calls

### Listening in to an external call

You are conducting an external call. An internal participant can listen in to this call and take part in the conversation (conference).



The **Listening In** function must be activated.

#### Activating/deactivating internal listening in

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Listening In** ▶ **Change** ( = on)

#### Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- ▶ Press and **hold** ... all participants will hear a signal tone

#### Ending listening in

- ▶ Press ... all participants will hear a signal tone

## During a conversation

### Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key

### Call volume

Applies to the current mode (handsfree, receiver or headset):

- ▶ Press ▶ ... use to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.


### Muting the microphone

When the microphone is switched off, callers will no longer hear you.





- Switch the microphone on/off during a call: ▶ Press

## Message lists

 
Notifications about missed calls, messages on the network mailbox, received SMS messages and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:



-  on the network mailbox
-  in the missed calls list
-  in the SMS message list
-  in the missed alarms list

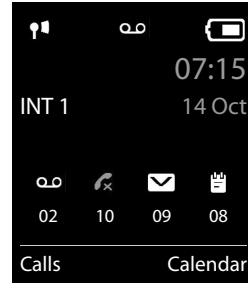Example



The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed
  - An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.
  - An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed
  - Network mailbox: The network mailbox number is dialed.

Example

Messages & Calls	
<b>Missed Calls:</b>	<b>(5)</b>
Mailbox:	(1)
SMS:	(4)
Missed Alarms:	(2)
Back	OK







## Call lists

# Call lists


 



The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

## List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
  -  Missed calls,
  -  Accepted calls,
  -  Outgoing calls
- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Date and time of call (if set)

Example

All calls	
  Frank	
Today, 15:40	[3]
 089563795	
13/05/15, 18:32	
  Susan Black	
12/05/2015,	
View	Options

## Opening the call list

Via the display key: ▶ **Calls** ▶ ... use  to select the list ▶ **OK**

Via the menu: ▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select the list ▶ **OK**

Via the Message key (missed calls):


▶ Press the Message key  ▶  **Missed Calls:** ▶ **OK**

## Calling back a caller from the call list



▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ▶ ... use  to select entry ▶ Press the Talk key 



## Additional options

▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ... possible options:

View an entry: ▶ ... use  to select entry ▶ **View**

Copy the number to the directory:

▶ ... use  to select entry ▶ **Options** ▶  **Copy to Directory**

Delete an entry: ▶ ... use  to select entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶  **Delete List** ▶ **OK** ▶ **Yes**

## Directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 20).




### Opening the directory

- ▶ Briefly press  in idle status

### Directory entries

Number of entries:	up to 200
Information:	First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon
Length of the entries:	Numbers: max. 32 digits First name, surname: max. 16 characters








### Creating an entry

- ▶  ▶  <New Entry> ▶ OK ▶ ... use  to switch between the entry fields and enter data for an entry.
- Save entry: ▶ Save








The entry is only valid if it contains at least one number.






### Searching for/selecting a directory entry

- ▶  ▶ ... use  to browse searched names
- or
- ▶  ▶ ... use  to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use  to continue browsing to the desired entry, if needed
- Scroll through directory: ▶  ▶ Press and hold 

### Displaying/changing an entry

- ▶  ▶ ... use  to select entry ▶ View ▶ ... use  to select the field to be changed ▶ Edit
- or
- ▶  ▶ ... use  to select an entry ▶ Options ▶ Edit entry ▶ OK

### Deleting entries



- Delete the **selected** entry: ▶  ▶ ... use  to select an entry ▶ Options ▶  Delete entry ▶ OK
- Delete **all** entries: ▶  ▶ Options ▶  Delete List ▶ OK ▶ Yes

el en

## Directory

### Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ **Options** ▶  **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

### Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.  
The other handset and the base station are able send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

#### Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






#### The recipient handset does not support vCards:

A separate entry is created and sent for each number.

#### The sending handset does not support vCards:

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

### Copying individual entries

▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy Entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**



Use **vCard via SMS** to send a directory entry in vCard format by SMS.

### Copying the entire directory

▶  ▶ **Options** ▶  **Copy List** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entries are copied one after the other

## Additional functions

### Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

July 2015						
Mo	Tue	We	Th	Fri	Sat	Su
	01	02	03	04	05	06
07	08	09	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31			
Back						OK

### Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then
- Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
- Enter information for the appointment:
  - ▶ ... use to successively select **Date, Time, Text and Signal** ▶ ... use or to set the relevant value ▶ **Save**



If an appointment has already been entered: ▶ <New Entry> ▶ OK ▶ ... Then enter information for the appointment.

### Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**
- Respond with SMS: ▶ Press the display key **SMS** ... the SMS menu is displayed



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

## Alarm clock

### Displaying/changing/deleting stored appointments

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ ... use to select day ▶ **OK** ... the appointment list is displayed ▶ ... use to select date ... possible options:

Display appointment details:

▶ **View** ... The appointment settings are displayed

Change appointment: ▶ **View** ▶ **Edit**

or ▶ **Options** ▶ **Edit entry** ▶ **OK**

Activate/deactivate appointment:

▶ **Options** ▶ **Activate/Deactivate** ▶ **OK**

Delete appointment: ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete all appointments for a day:

▶ **Options** ▶ **Delete all Appoints.** ▶ **OK** ▶ **Yes**

## Alarm clock



Date and time have been set.

### Activating/deactivating the alarm clock and setting the wake-up time

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then

Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**

Enter alarm data: ▶ ... use to successively select **Time**, **Occurrence**, **Volume** and **Melody** ▶ ... use or to set the relevant value ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

### Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

### Switching off /repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.



## Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the ability to press the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

### Activating and setting the baby monitor

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Baby Monitor** ▶ **OK** ... then

Switch on/off:

▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

**External:** ▶ **Number** ▶ ... use to select number or select a number from the directory: ▶

**Internal:** ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ **OK**

Activate/deactivate two-way talk:

 
▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

▶ **Sensitivity** ▶ ... use to select **High** or **Low**

Save settings: ▶ **Save**

**Baby Monitor activated**

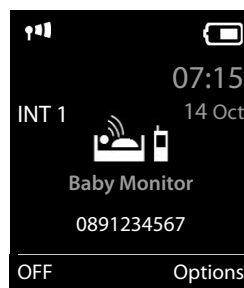


The destination number is displayed in idle display when the baby monitor is activated.

## Baby monitor

---

### Switching off/interrupting the alarm

- Switch off the alarm: ▶ In idle status press the display key **OFF**
- Interrupt the alarm: ▶ Press the End call key  during an alarm

---

### Deactivating the alarm remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

- ▶ Accept alarm call ▶ Press keys **[9] [#]** ... the call is ended

The alarm is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.





Reactivate baby monitor with the same number: ▶ ... Reactivate (→ p. 23) ▶ **Save**

## ECO DECT

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

### Reducing radiation by up to 80%

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶ **Maximum Range** ▶ **Change** ( = off)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

### Deactivating radiation in idle status

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶  **No Radiation** ▶ **Change** ( = on)



To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

▶ Press and **hold** the Talk key  ... the ringing tone will sound.

Further information can be found at [www.gigaset.com](http://www.gigaset.com).

## Protection against unwanted calls

# Protection against unwanted calls

## Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

 
- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then

Switch on/off: ▶ use to select **On** or **Off**

Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format

Save: ▶ **Save**

Example

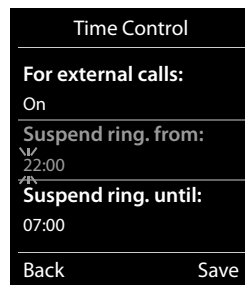

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

## Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

### For one handset

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** ( = on) ... the call is only signalled on the display

### For all handsets

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Anonymous Calls** ▶ **Edit** ( = on) ▶ ... use to select **Protection Mode**:

**No Protection** Anonymous calls are indicated in the same way as identified numbers

**Silent Call** The telephone will not ring and the incoming call will only appear in the display.

**Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

Save settings: ▶ **Save**






## Black list

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

### Transferring a number from a call list to the black list

▶  ▶ ... use  to select  **Call Lists** ▶ OK ▶ ... use  to select **Accepted calls/ Missed calls** ▶ OK ▶ ... use  to select entry ▶ **Options** ▶ **Copy to Blacklist** ▶ OK

### Displaying/editing the black list

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ **Edit** ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:

Create an entry: ▶ **New** ▶ ... use  to enter a number ▶ **Save**

Delete an entry: ▶ ... use  to select an entry ▶ **Delete** ... the entry is deleted

### Setting the protection mode

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ **Edit** ▶  **Protection Mode** ▶ OK ▶ ... use  to select desired protection:

**No Protection** All calls are indicated, including from callers whose numbers are on the black list.

**Silent Call** The telephone will not ring and the incoming call will only appear in the display.

**Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

Save settings: ▶ **Save**

## Other functions

The telephone offers further functions: e.g. write and send SMS



Further information can be found in the detailed user guide at  
→ [www.gigaset.com/manuals](http://www.gigaset.com/manuals) or on the enclosed CD (if included).

## Appendix

### Customer Service & Assistance

Step by step towards your solution with Gigaset Customer Care  
[www.gigaset.com/service](http://www.gigaset.com/service)



#### Visit our Customer Care pages:

[www.gigaset.com/service](http://www.gigaset.com/service)

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



#### Contact our Customer Care staff:

Couldn't find a solution in the FAQs section?

We are happy to help...

... **by eMail:** [www.gigaset.com/contact](mailto:www.gigaset.com/contact)

... **by telephone:**

**Service Greece +30 2111 98 1778**

(0.026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

### Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria.

## Manufacturer's advice

- Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

## Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

## Manufacturer's advice

### Authorisation

This device is intended for analogue phone lines in the Greek telephone net.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

The EC declaration of your country according to 1999/5/EC can be found at:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

**CE 0682**

## Manufacturer's advice

---

## Environment

---

### Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

### Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

### Contact with liquid

If the device comes into contact with liquid:






 
- 1 **Disconnect the power supply.**
  - 2 **Remove the batteries and leave the battery compartment open.**
  - 3 Allow the liquid to drain from the device.
  - 4 Pat all parts dry.
  - 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
  - 6 **Do not switch on the device again until it is completely dry.**
- When it has fully dried out, you will normally be able to use it again.


 


## Display icons



The following icons are displayed depending on the settings and the operating status of your telephone.



### Icons in the status bar

Icon	Meaning
	Signal strength ( <b>No Radiation</b> off) 1% - 100% white, if <b>Maximum Range</b> on; green, if <b>Maximum Range</b> off
	Red: no connection to the base station
	<b>No Radiation</b> activated: white, if <b>Maximum Range</b> on; green, if <b>Maximum Range</b> off
	Ringtone switched off
	"Beep" ringtone activated
	Keypad lock activated

 

 
 

Icon	Meaning
	Battery charge status: White: between 11% and 100% charged Red: less than 11% charged Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status): 0% - 100%




### Display key icons

Icon	Meaning
	Last number redial
	Delete text




Icon	Meaning
	Open the directory
	Copy number to the directory




### Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call

**Display icons****Other display icons**

Icon	Meaning
	Alarm clock is on, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

# Index

## A

Alarm	22
Alarm clock	22
switch on/off	22
Answer machine	
calling back a caller	18
Appointment	
notification	21
setting	21
Authorisation	29

## B

Baby monitor	23
activation	23
Battery	
charging	7
charging status	31
inserting	6
Black list	27
Broken display	4

## C

Calendar	21
Call	
accepting	14
external	13
internal	14
participant listening in	16
transferring internally (connecting)	15
Call block	27
Call list	
copying a number to the directory	18
delete	18
delete an entry	18
dialling	13
entry	18
opening	18
Call lists	18
Call swapping	15
Call waiting, external	
accepting/rejecting	15
Call waiting, internal	
accept	15
Call, anonymous	
protection from	26
Calling	
external	13
internal	14
Care	30
Care of the device	30
Charge status of the batteries	31
Charging cradle (handset)	
connecting	6
Conference	15

Conference call	
end	15
Connecting the base	
to the mains power supply/ telephone network	5
Connecting the power cable	6
Consultation call	
internal	15
Contact with liquid	30
Contents of the package	5
Control key	1, 10
Correcting incorrect entries	12
Customer Care	28
Customer Service & Assistance	28

## D

Deactivating wireless module	25
Dialling	
from the call list	13
from the directory	13
from the redial list	13
Directory	19
dialling numbers	13
entry	19
opening	19
order of entries	20
saving an entry	19
searching	19
selecting an entry	19
sending entry/list to handset	20
sending to handset	20
Display	
broken	4
network mailbox message	17
Display icons	31
Display keys	1, 10
icons	31
Disposal	30

## E

Earpiece volume	16
ECO DECT	25
Emergency numbers	
not possible	4
End call key	13
Entering special characters	12
Entering text	12
Entering umlauts	12
Environment	30
Exclusion of liability	29

## F

Fast access	13
-------------	----

**Index**

**G**

Getting started . . . . . 5  
 Guarantee Certificate . . . . . 28

**H**

Handset  
 connecting the charging cradle . . . . . 6  
 earpiece volume . . . . . 16  
 idle status . . . . . 11  
 muting . . . . . 16  
 registering . . . . . 8  
 set up . . . . . 6  
 speaker volume . . . . . 16  
 switch on/off . . . . . 9  
 use as a baby monitor . . . . . 23  
 Handsfree key . . . . . 16  
 Handsfree mode . . . . . 16  
 Hearing aids . . . . . 4

**I**

Icons  
 alarm clock . . . . . 22  
 displaying new messages . . . . . 17  
 indications . . . . . 31  
 on display keys . . . . . 31  
 status bar . . . . . 31  
 Idle status  
 returning to . . . . . 11  
 Indications, icons . . . . . 31  
 Internal  
 consultation . . . . . 15  
 listening in . . . . . 16  
 making calls . . . . . 14

**K**

Key (base), registration/paging . . . . . 1  
 Key 1 (fast access) . . . . . 1  
 Keys  
 control key . . . . . 1, 10  
 display keys . . . . . 1, 10  
 End call key . . . . . 13  
 fast access . . . . . 1  
 handsfree . . . . . 16  
 menu . . . . . 10  
 recall key . . . . . 1  
 star key . . . . . 1  
 talk key . . . . . 1

**L**

Language  
 display . . . . . 7  
 Liquid . . . . . 30  
 Listening in to an external call . . . . . 16  
 Locking/unlocking the keypad . . . . . 9  
 Lower/upper case . . . . . 12

**M**

Making calls  
 accepting a call . . . . . 14  
 external . . . . . 13  
 internal . . . . . 14  
 Maximum Range . . . . . 25  
 Medical equipment . . . . . 4  
 Menu key . . . . . 10  
 Message lists . . . . . 17  
 Microphone . . . . . 1  
 switch on/off . . . . . 16  
 Muting the handset . . . . . 16

**N**

Number  
 saving in the directory . . . . . 19  
 Numbers  
 entering . . . . . 12

**P**

Phone directory, see Directory . . . . . 13  
 Phonebook, see Directory . . . . . 13  
 Power adapter . . . . . 4  
 Protection from calls  
 anonymous . . . . . 26  
 black list . . . . . 27  
 time control . . . . . 26

**Q**

Quick dial . . . . . 13

**R**

Radiation  
 reducing . . . . . 25  
 Radiation-free . . . . . 25  
 Recall key . . . . . 1  
 Redial list . . . . . 13  
 Registering (handset) . . . . . 8  
 Registration/paging key . . . . . 1  
 Ringtone  
 time control . . . . . 26

**S**

Safety precautions . . . . . 4  
 Searching in directory . . . . . 19  
 Sending  
 entire directory to handset . . . . . 20  
 Setting the date . . . . . 8  
 Setting the time . . . . . 8  
 Setting up  
 handset . . . . . 6  
 Setting up the base . . . . . 5  
 Setting up the charging cradle (handset) . . . . . 5  
 Show new messages . . . . . 17  
 Signal strength . . . . . 31

**Index**

SMS	27
Snooze mode (alarm)	22
Speaker	16
Speaker volume	16
Star key	1
Status bar	
icons	31
Switch off the alarm (baby monitor)	24
Symbols, see Icons	31

**T**

Talk key	1
Telephone	
operating	9
Three-way conference call, see Conference call	
Time control for external calls	26
Transferring, external call internally	15

**U**

Upper/lower case	12
------------------	----

**V**

Viewing network mailbox message	17
Volume	
handset speaker/earpiece volume	16

Issued by

Gigaset Communications GmbH

Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2015

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)